



Sega CD CD Tray Replacement

This guide will show how to remove the CD tray from your console.

Written By: sskyllin





TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Sega CD Plastic Housing Removal



- Using the Phillips head screwdriver, remove the six screws on the bottom of the console.

Step 2

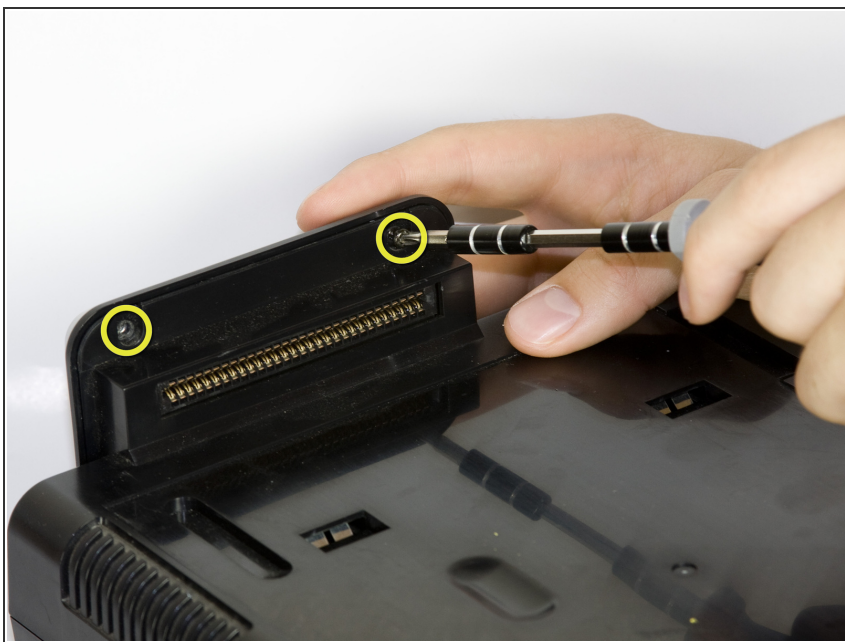

- Remove the two screws that attach the Genesis' connector to the rest of the console.

Step 3



- Slide the lock tab to the left to separate the halves of the console.

Step 4




- Lift from the left side to remove the top of the case.

Step 5



- Using the spudger, pry the cover off of the Genesis attachment.

Step 6

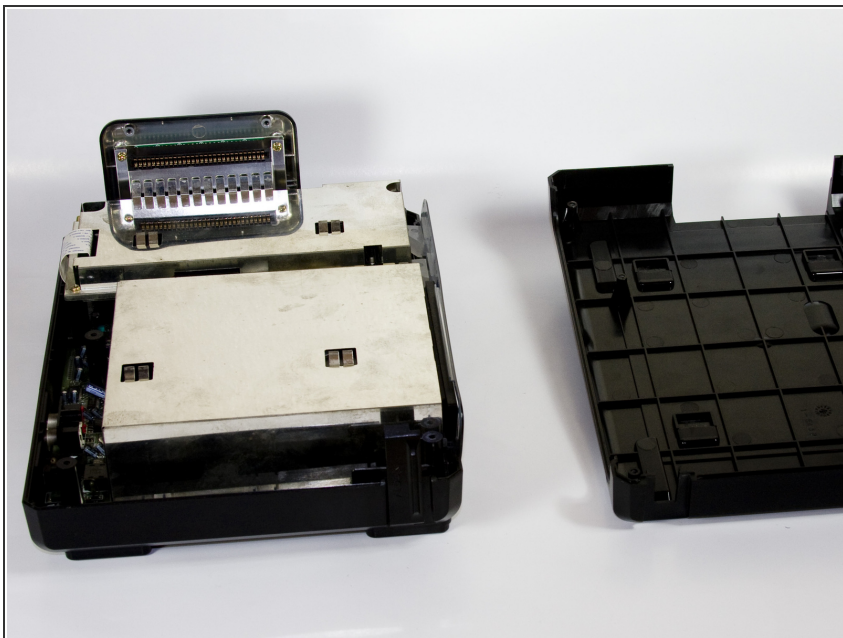


- Lift the top of the case to remove the cover.

Step 7




- Remove the faceplate by pulling it up, then out.

Step 8 — CD Tray

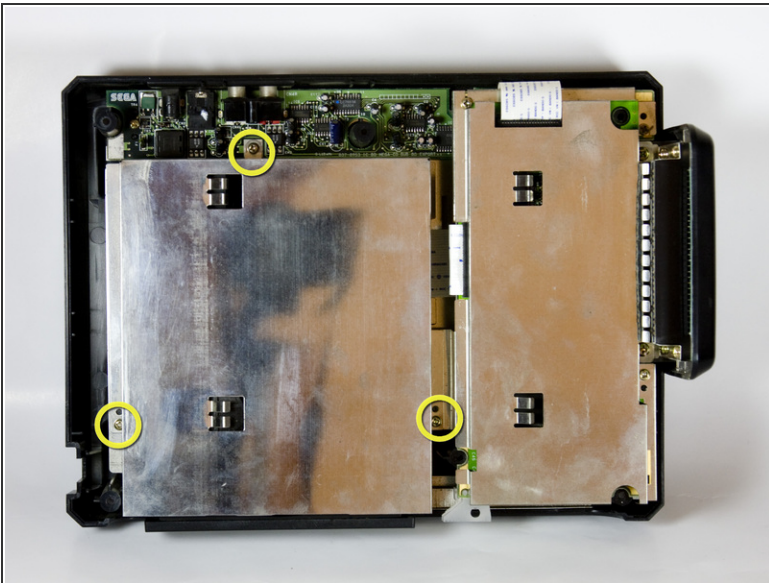


- Remove metal plate by unscrewing the three screws with the Phillips head screwdriver and then lifting the plate.

Step 9

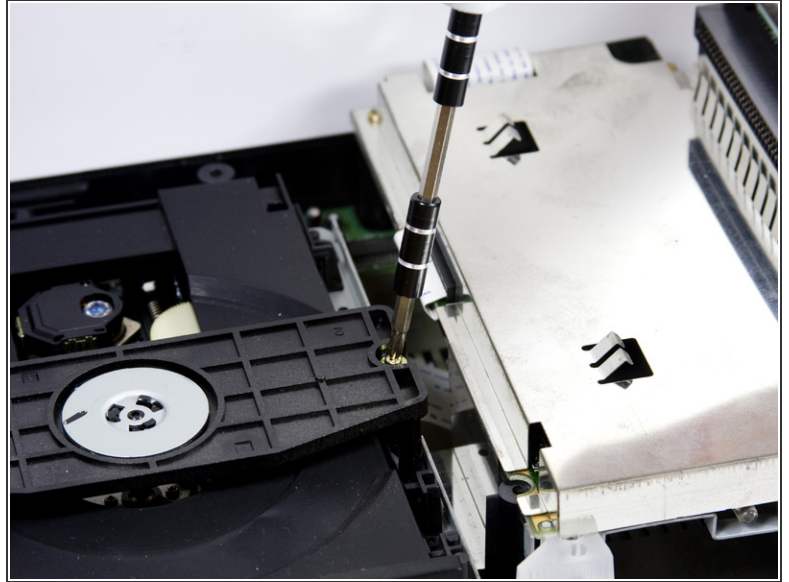

- Remove the two screws from the plastic bar.

Step 10

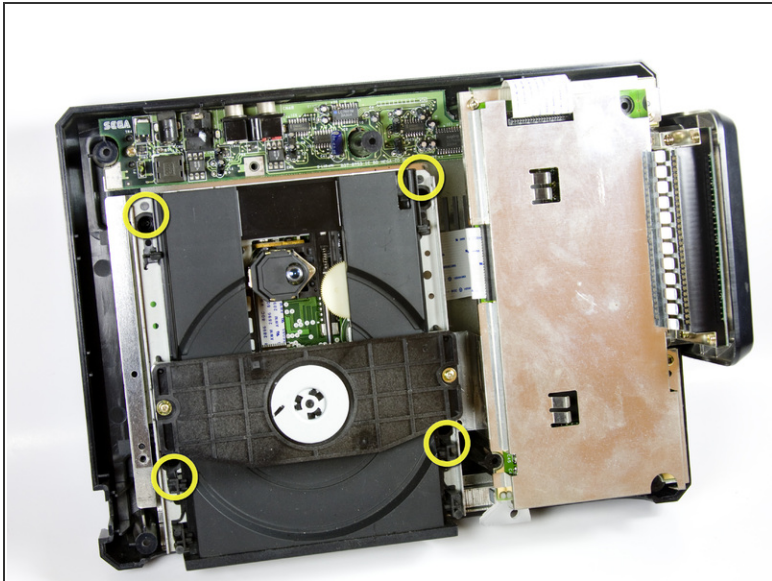




- To remove the CD tray, remove the four screws with the Phillips head screwdriver.

Step 11



- Carefully unplug the wire connected to optical reader.

Step 12

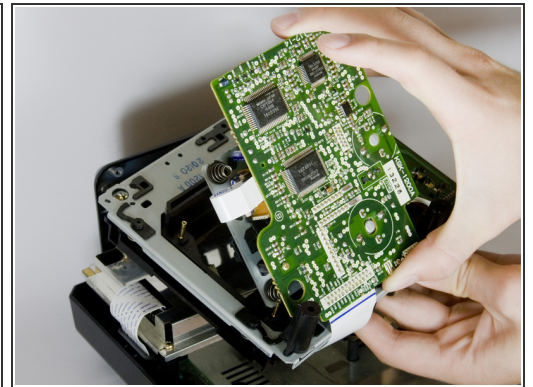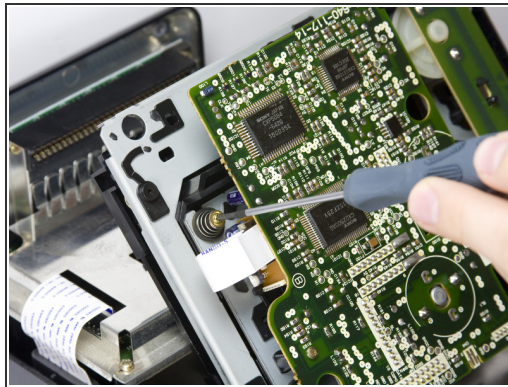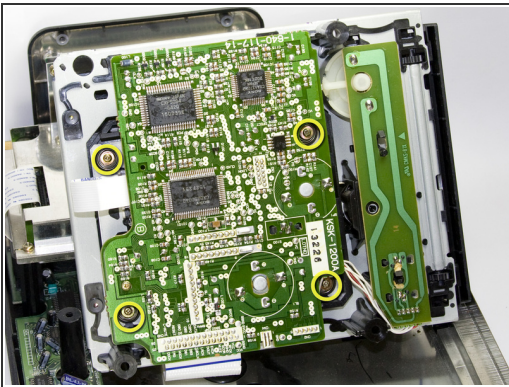

- Remove the four screws on the underside of the CD tray with a small Phillips head screwdriver.
- ⚠ The four springs below the circuit board are attached to the screws, so be careful not to lose them when you remove the screws.
- Carefully remove the CD tray from circuit board.

To reassemble your device, follow these instructions in reverse order.

